


EN

USER MANUAL

AR

دليل المستخدم

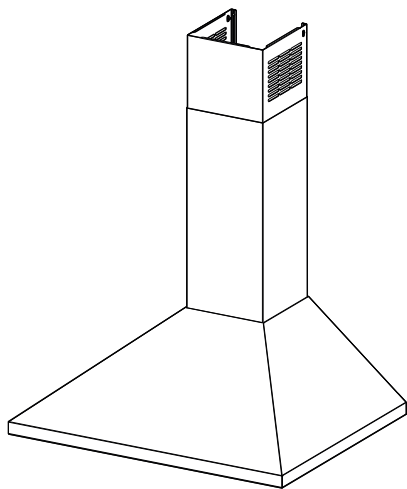

EN		3
AR		6

1. SAFETY INFORMATION

- For your own safety and correct operation of the appliance, please read this manual carefully before installation and use. Always keep these instructions together with the appliance even if it is sold or transferred to third parties. Users must fully know the operation and safety features of the appliance.
- The electrical connections have to be done by specialized technician.
- The manufacturer will not be held liable for any damages resulting from incorrect or improper installation.
- Check that the mains power supply corresponds to the one indicated on the rating plate on the product.
- **WARNING:** Before installing the appliance, remove the protective films (if present).
- Do not touch the appliance if your hands or body are wet.
- Ensure that the device is not exposed to atmospheric agents (rain, sun).
- Keep the packaging away from children and animals.
- Do not use adapters, multiple sockets or extension cables to connect the device.
- Do not stand on the appliance, as this may damage it.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- This appliance is not intended for use by persons (including children) with reduced physical, Sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Connect the plug to a socket complying with current regulation, located in an accessible place.
- Means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified persons in order to avoid a hazard.
- For Class I appliances, check that the domestic power supply guarantees adequate earthing.
- Do not flambé (Fire hazard).



WARNING: Failure to install the screws or fixing device in accordance with these instructions may result in electrical hazards.

- Use only screws and small parts in support of the appliance.
- Ensure that the device is installed in a way that allows to disconnect it from the power supply, with a contact opening distance (3mm) that ensures complete disconnection in category III overvoltage conditions.
- Do not look directly at the light through optical devices (binoculars, magnifying glasses...).



CAUTION: the appliance and its accessible parts may become hot during the use with cooking appliances.

- The minimum safety distance between the cooker top and the lowest part of the range hood is 650 mm (some models may be installed at lower height; please check the paragraph relating to working dimensions and installation).
- If the instructions for installation for the gas hob specify a greater dis-


- tance, this has to be taken into account.
- Connect the extractor to the exhaust flue through a pipe of minimum diameter 120 mm. The route of the flue must be as short as possible.
 - With regards to the technical and safety measures to be adopted for fume discharging it is important to closely follow the regulations provided by the local authorities.
 - There shall be adequate ventilation of the room when this appliance is used at the same time as appliances burning gas or other fuels (not applicable to appliances that only discharge the air back into the room), in order to prevent the backflow of exhaust gas.
 - Clean the appliance and the filters and replace them after the specified time period (Fire hazard). See paragraph Cleaning and Maintenance.
 - Regulations concerning the discharge of air have to be fulfilled.
 - The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels (not applicable to appliances that only discharge the air back into the room).
 - When the cooking appliance and appliances supplied with energy other than electricity are simultaneously in operation, the negative pressure in the room must not exceed 4 Pa (4 x 10⁻⁵ bar), to prevent fumes being sucked back into the room by the cooking appliance.
 - Range hoods and other cooking fume extractors may adversely affect the safe operation of appliances burning gas or other fuel (including those in other rooms) due to back flow of combustion gases. These gases can potentially result in carbon monoxide poisoning. After installation of a range hood or other cooking fume extractor, the operation of flued gas appliances should be tested by a competent person to ensure that back flow of combustion gases does not occur.
 -  "In case of replacement with halogen lamp use only self-shielded tungsten halogen lamps or self-shielded metal halide lamps."
 - The symbol  on the product or on its packaging indicates that the product must not be disposed of with the normal domestic waste. The product must be disposed of at a specialist re-cycling centre for electrical and electronic components. By making sure that this product is disposed of properly, you will help prevent possible negative consequences for the environment and for health that might result from its improper disposal. For more detailed information on how to re-cycle this product, please contact your local municipal offices, local waste disposal service or the shop in which the product was purchased.

2. USE


- The suction hood has been designed exclusively for domestic use, to eliminate kitchen odours.
- Never use the hood for purposes other than those for which it was designed.
- Never leave high flames under the hood when it is in operation.
- Adjust the intensity of the flame so that it is directed onto the bottom of the cooking pan, making sure it does not wrap around the sides.
- Deep-fryers must be kept under constant supervision when in use: the oil may catch fire if it gets too hot.

3. CLEANING AND MAINTENANCE

- The activated carbon filter is neither washable nor regenerable and must be replaced approximately every 4 months of operation or more frequently in case of very intense use (W).

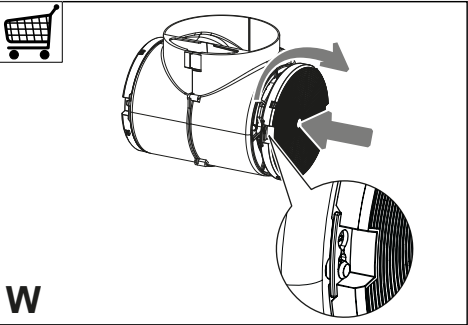

- The grease filters must be cleaned every 2 months of operation or more frequently in case of very intense use and can be washed in a dishwasher (Z).

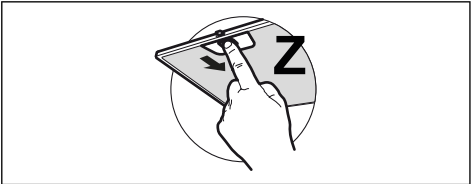

- Clean the hood using a damp cloth and a neutral liquid detergent.
- For external and internal cleaning of the hood avoid alcoholic or silicone products.

If the product or one of its parts is made of stainless steel, use specific non-abrasive products for cleaning and follow the lines of the satin finish during cleaning.

4. CONTROLS

	① T1	2 T2	3 T3	☀ L
Key	Function			
T1	Turns the suction motor on and off at the first speed.			
T2	Turns the motor on at the second speed.			
T3	Turns the motor on at the third speed.			
L	Turns the lighting system on and off at maximum intensity.			

5. LIGHTING

Lamp	Power (W)	Socket	Voltage (V)	Dimension (mm)	ILCOS Code
	4	E14	220-240	107x37	DRBB/F-4-220-240-E14-35/100

1. معلومات بشأن السلامة

قد تلقوا منه التعليمات الخاصة باستخدام الجهاز.

راقب الأطفال، حتى تتأكد من عدم لعبهم بالجهاز.

يجب ألا ينفذ الأطفال النظافة والصيانة التي يختص بها المستخدم بدون إشراف.

قم بتوصيل القابس بمقبس مطابق للمعايير السارية وفي موضع يمكن الوصول إليه.

يجب أن تُدمج وسائل الفصل في الكابلات الثابتة وفقاً للوائح في هذا الصدد.

في حالة تلف كابل الطاقة، يجب استبداله من قبل الشركة المنتجة أو وكيل الخدمة الخاص بها أو من قبل أشخاص ذات مؤهلات مماثلة لتجنب الأخطار.

بالنسبة للأجهزة من الفئة الأولى، تحقق من أن التغذية الكهربائية المنزلية تضمن تارضياً صحيحاً.

لا تستخدم اللهب المكشوف (خطر الحريق).

⚠ تحذير: يمكن أن يؤدي عدم تركيب المسامير أو أدوات التثبيت طبقاً لهذه التعليمات إلى مخاطر الصعقات الكهربائية.

لا تستخدم إلا المسامير ومكونات التوصيل المناسبة لتثبيت الجهاز.

تأكد من تركيب الجهاز بطريقة تتمكن معها من فصله عن التغذية الكهربائية، مع وجود مسافة فتح بين نقاط التلامس (3 مم) والتي تضمن الفصل الكامل في حالات الجهد الزائد من الفئة الثالثة.

لا تراقب مباشرة باستخدام الأدوات البصرية (منظار، عدسة مكبرة...).

⚠ تنبيه: قد تُصبح الأجزاء التي يمكن الوصول إليها ساخنة للغاية أثناء استخدام أجهزة الطهي.

الحد الأدنى لمسافة الأمان الفاصلة بين موقد الطهي المسطح والشفاط هي 650 مم (يمكن تركيب بعض الموديلات على ارتفاع أقل من ذلك؛ انظر فقرة حجم وأبعاد التشغيل والتركيب).

إذا نصت تعليمات تركيب موقد الطهي بالغاز على مسافة أكبر من تلك المذكورة

- من أجل سلامتك الشخصية ومن أجل التشغيل الصحيح للجهاز، يرجى قراءة هذا الدليل بعناية قبل التركيب والتشغيل. احتفظ دائماً بهذه التعليمات مع الجهاز، حتى في حالة بيعه أو نقله إلى الغير. يجب أن يحيط المستخدمون علماً بتشغيل هذا الجهاز ومواصفات السلامة الخاصة به.
- يجب تنفيذ توصيل الكابلات بواسطة فني مختص.
- لن يجوز اعتبار الشركة المصنعة مسؤولة عن أية أضرار ناتجة عن التركيب أو الاستخدام غير الصحيح.
- تحقق من أن تغذية الطاقة الواردة من الشبكة تتوافق مع التغذية المبينة على لوحة البيانات المثبتة داخل المنتج.
- تحذير: قبل تركيب الجهاز، أزل طبقات الحماية (في حالة وجودها).
- لا تلمس الجهاز بأيدي مبللة أو بأجزاء من الجسم مبللة.
- يجب ألا يتعرض الجهاز أبداً للعوامل الجوية (المطر والشمس).
- حافظ على مواد التغليف بعيداً عن متناول الأطفال والحيوانات المنزلية.
- لا تستخدم مهابئات التيار أو مشتركات أو كابلات إطالة لتوصيل الجهاز.
- لا تقف على الجهاز، نظراً لأن ذلك قد يتلفه.
- يجوز استخدام هذا الجهاز من قبل الأطفال الذين تتجاوز أعمارهم 8 سنوات ومن قبل الأشخاص ذوي القدرات البدنية أو الحسية أو العقلية المنخفضة أو من قبل من يفقدون للخبرة والمعرفة، طالما تم الإشراف عليهم أو تدريبهم على استخدام الجهاز بطريقة آمنة وفهموا المخاطر التي ينطوي عليها.
- هذا الجهاز غير مخصص للاستخدام من قبل الأشخاص (بمن فيهم الأطفال) ذوي القدرات البدنية أو الحسية أو العقلية المنخفضة أو من قبل من يفقدون للخبرة والمعرفة، إلا أن يكونوا تحت إشراف شخص مسئول عن سلامتهم أو أن يكونوا

☼ " في حال تغيير مصباح الهالوجين قم باستعمال فقط المصابيح من نوع التنغستن ذاتية الحماية self-shielded tungsten halogen lamps مصابيح هاليد معدنية الحماية self-shielded metal halide".

يشير الرمز ⚠ الموجود على المنتج أو على عبوته بأنه لا يجوز التخلص من المنتج كنفائات منزلية عادية. يجب منح المنتج المطلوب التخلص منه إلى مركز جمع نفائات مخصص لإعادة تدوير المكونات الكهربائية والإلكترونية. من خلال التأكد من التخلص من هذا المنتج بشكل صحيح، فإنك ستساهم في الوقاية من العواقب السلبية المحتملة على البيئة والصحة والتي قد تنتج بسبب التخلص غير المناسب منه. لمزيد من المعلومات الأكثر تفصيلاً عن إعادة تدوير هذا المنتج، اتصل بمكتب البلدية أو بالخدمة المحلية للتخلص من النفائات أو المحل الذي تم شراء المنتج منه.


2. الاستعمال

إن المدخنة مصممة للاستخدام المنزلي فقط، وبهدف شطف الروائح الناتجة عن الطبخ. لا تستخدم المدخنة في أغراض غير التي تم تصميمها من أجله. لا تسمح أبداً بوجود لهب مرتفع مكشوف تحت الغطاء أثناء تشغيل الجهاز. تحكم في شدة اللهب بحيث يكون ملاصق لقاع أواني الطبخ فقط، والتأكد من عدم اندلاعه من الجوانب. يجب مراقبة أواني القلي العميقة باستمرار أثناء الاستخدام حيث إن الزيت الذي يتم تسخينه بإفراط قد يلتهب.

- أعلاه، فإنه من الضروري أخذها في الاعتبار.
- قم بتوصيل الشفاط بالمدخنة بواسطة أنبوب بقطر لا يقل عن 120 مم. يجب أن يكون مسار المدخنة أقصر مسار ممكن.
- بشأن الإجراءات الفنية وإجراءات السلامة اللازم تبنيها من أجل تصريف الأدخنة، من المهم الامتثال بدقة للوائح المحددة من قبل السلطات المحلية.
- عندما يُستخدم هذا الجهاز في نفس الوقت مع أجهزة تعمل بالغاز أو بأنواع أخرى من الوقود (لا ينطبق على الأجهزة التي تفرغ الهواء في الغرفة فقط)، فإنه يجب توفر تهوية كافية في الغرفة من أجل تجنب التدفق العكسي لغازات العادم.
- نظف واستبدل المرشحات بعد الفترة الزمنية المحددة (لتجنب خطر الحريق). اطلع على فقرة النظافة والصيانة.
- يجب الالتزام بالوائح المتعلقة بطرد الهواء.
- يجب عدم طرد الهواء في مدخنة تستخدم لتصريف الأدخنة من أجهزة منزلية تحرق الغاز أو أنواع أخرى من الوقود (لا يسري هذا التحذير على الأجهزة التي تطرد الهواء في الغرفة فقط).
- عند تشغيل جهاز الطهي هذا في نفس الوقت مع الأجهزة التي تتم تغذيتها بطاقة غير الكهرباء، فيجب ألا يتجاوز الضغط السليبي في الغرفة 4 باسكال (4 × 10-5 بار)، من أجل تجنب أن يقوم جهاز الطهي بإعادة شطف الأدخنة إلى الغرفة.
- يمكن أن تؤثر شفاطات المطبخ وأنظمة الشفط الأخرى لأدخنة الطهي تأثيراً سلبياً على التشغيل الآمن للأجهزة الكهربائية المنزلية التي تعمل بالغاز أو بأنواع الوقود الأخرى (بما في ذلك الأجهزة الموجودة في غرف أخرى) بسبب التدفق العكسي لغازات الاحتراق. ربما تكون هذه الغازات قادرة على التسبب في التسمم بأول أكسيد الكربون. بعد تركيب شفاط أو مروحة شفط لأدخنة الطهي، يجب اختبار تشغيل الأجهزة التي تعمل بالغاز المسال بواسطة خبير لضمان عدم حدوث تدفق عكسي لغازات الاحتراق.

3. التنظيف والصيانة


في حالة الاستخدام المكثف للغاية، ويمكن غسلها في غسالة الأطباق (Z).

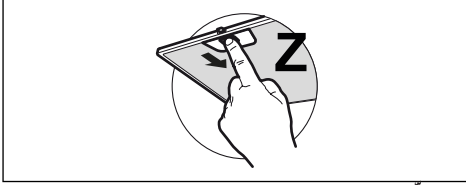

- نظّف الشفاط باستخدام قطعة قماش رطبة ومنظف سائل محايد.
- لإجراء النظافة الخارجية والداخلية للشفاط، تجنب المنتجات المحتوية على الكحول أو السليكون.

إذا كان المنتج أو أحد أجزائه مصنوعاً من الفولاذ المقاوم للصدأ، فاستخدم من أجل تنظيفه منتجات نوعية غير مسببة للتآكل واتبع اتجاه خطوط النقوش أثناء التنظيف.

- مرشح الكربون النشط ليس قابلاً للغسل ولا هو قابل للتجديد، ويجب استبداله كل 4 شهور تشغيل تقريباً أو بمعدلات منتظمة في حالة تشغيله تشغيلاً مكثفاً (W).

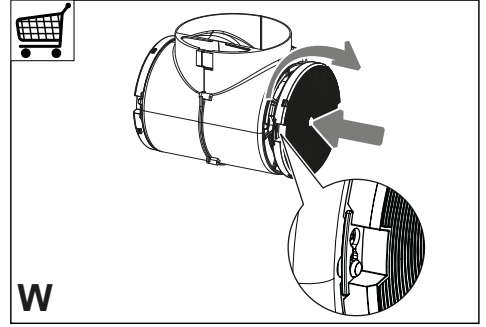

- يجب تنظيف مرشحات إزالة الدهون كل شهرين من التشغيل، أو بشكل أكثر تكراراً

4. مفاتيح التشغيل

	① T1	2 T2	3 T3	☀ L
الزر	الوظيفة التشغيلية			
T1	يوقد ويطفئ المحرك على السرعة الأولى.			
T2	يتم إشعال المحرك على السرعة الثانية.			
T3	يوقد المحرك على السرعة الثالثة.			
L	يقوم بتشغيل وإطفاء جهاز الإضاءة على أقصى شدة.			

5. الإضاءة

مصابيح	القدرة (واط)	مقبس (فيشة)	الفولتية (ف)	الأبعاد (مم)	رمز ILCOS
	4	E14	220-240	37×107	DRBB/F-4-220-240- E14-35/100

